



Slash Modified Late Model Body Assembly Instructions

Tools required:

- Body scissors (part #3431 or 3432, sold separately)
- Tapered body reamer (part #3433 or 3433X, sold separately)
- 2.0mm hex wrench (sold separately)

The included body is untrimmed and will need to be cut along the indicated lines in order to fit the stock chassis.


Optional trim lines on the front and rear of the body can be cut to alter the ride angle of the body.



CAUTION: RISK OF INJURY!

Use care with hobby knives, tapered reamers, and other cutting tools as they are extremely sharp and can cause severe injury, deep cuts, and/or punctures.

Covers Part #10423

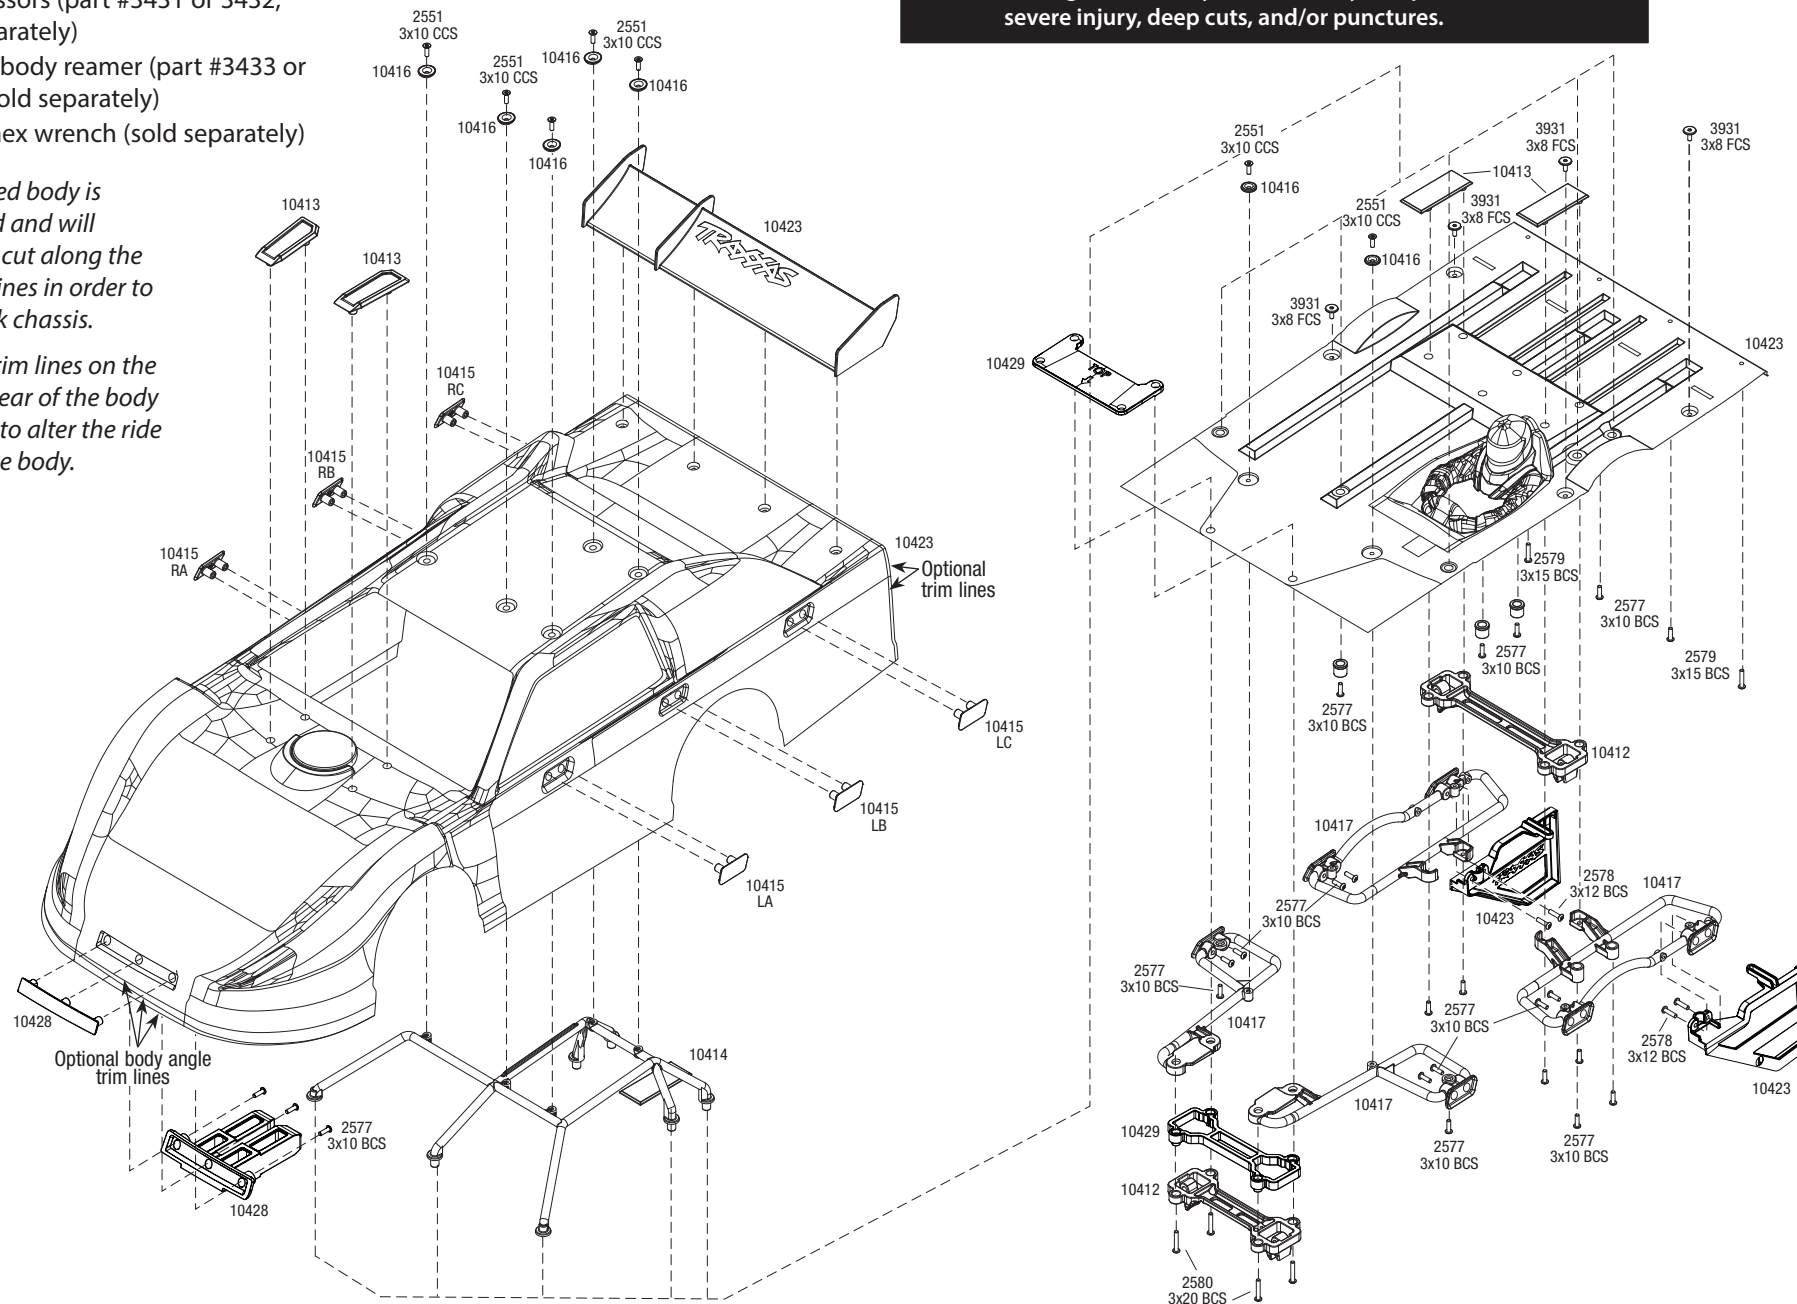


Instructions d'assemblage de la carrosserie du modèle tardif modifié Slash

Outils requis :

- Ciseaux pour carrosserie (pièce #3431 ou 3432, vendues séparément)
- Alésoir de carrosserie conique (pièce no 3433 ou no 3433X, vendues séparément)
- Clé Allen de 2,0 mm (vendue séparément)

La carrosserie incluse n'est pas coupée et devra l'être le long des lignes indiquées afin de s'adapter au châssis d'origine.

Des lignes de découpe en option à l'avant et à l'arrière de la carrosserie peuvent être coupées pour modifier l'angle de conduite de la carrosserie.

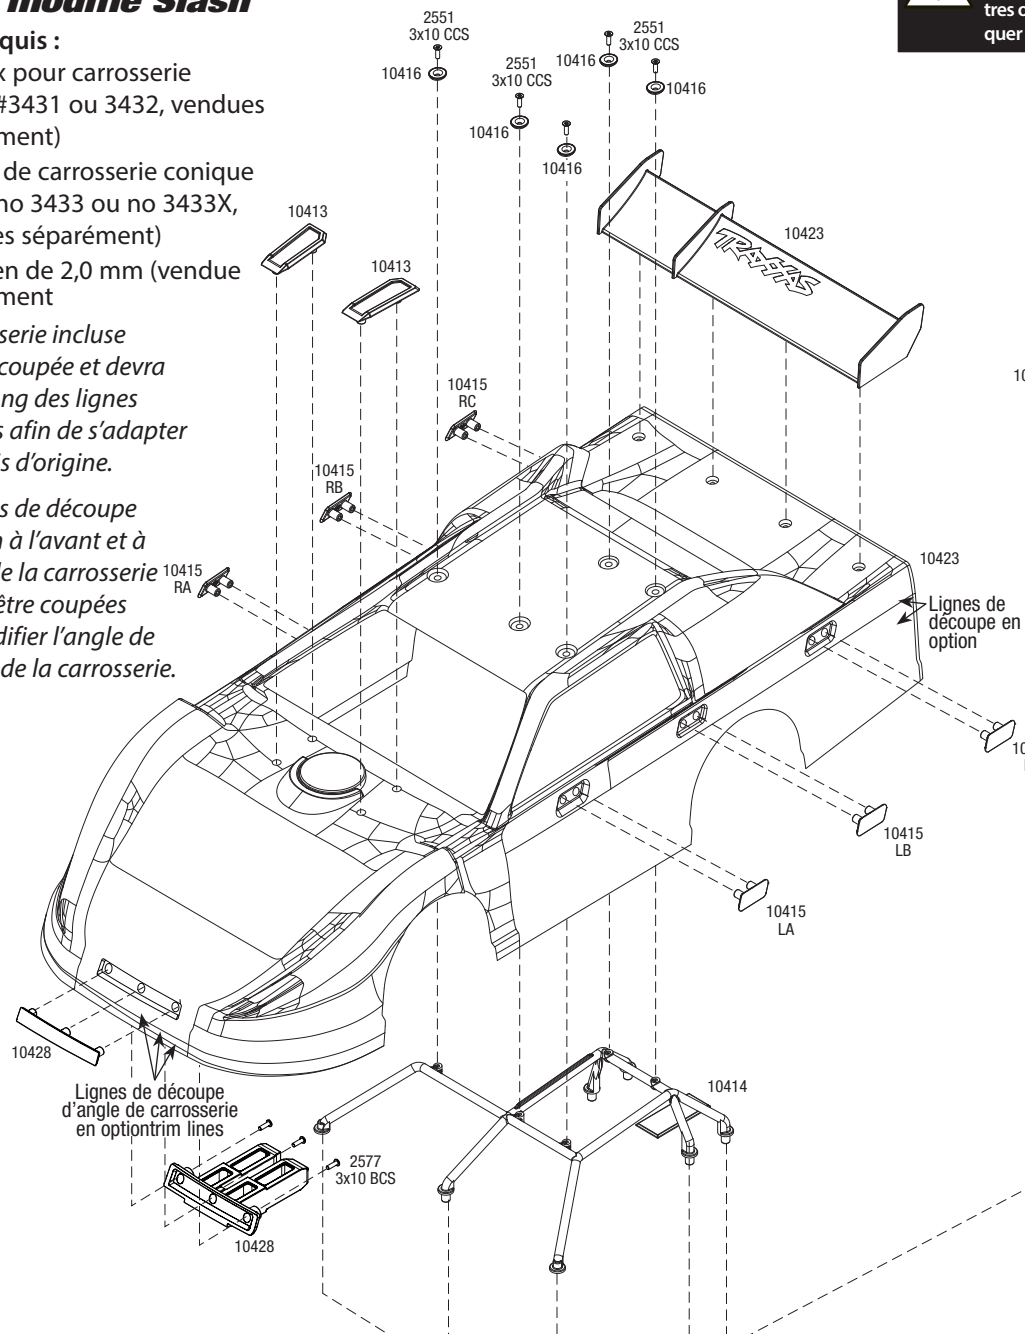

ATTENTION : RISQUE DE BLESSURES!

Faites attention avec les couteaux à tout faire, les alésoirs coniques et les autres outils de coupe, car ils sont extrêmement tranchants et peuvent provoquer des blessures graves, des coupures profondes et/ou des perforations.

Concerne le pièce #10423

